

- Refer to Visio P&ID Process Designer [System Requirements](#).
- Visio P&ID Process Designer is a Software that requires Microsoft Visio® Professional ([sold separately](#)) to operate.
- Register, then download and install full-featured software for Visio P&ID Process Designer 2016.1 (Visio Professional 2010, 2013 or 2016).
- Check the operating system if it is 64 bit or 32 bit, accordingly install Microsoft Visio Professional 64 bit or 32 bit.
- Ensure you have read/write access for installation.
- Ensure minimum 1GB space on C drive (files will be extracted on C drive).
- Once Visio Professional is installed, open it once and close it for installing Visio P&ID Process Designer.
- [Close all](#) active Microsoft® office applications (including Visio) before installing Visio Process Designer 2016.1.
- Depending upon your installed Visio, click trial version of Visio P&ID Process Designer 2016.1 download link to initiate your download and then run the installation.
- On the installation window select Visio P&ID Process Designer setup and click installation button and follow steps to complete the installation.
- Disconnect all external devices like Docking Stations while generating the license code and also while activating the license code. You can start using your external devices once you successfully activated the license code.
- Make sure to turn off the antivirus and firewalls (if any) while installing the Visio P&ID Process Designer.
- Recommendation Note: Before start installation of Visio P&ID, first launch your Microsoft Visio® Professional for a seamless integration with our solution.
- Restart your computer before launching the trial.
- To ask questions or provide feedback, please send us email on support@visiopic.com.