

- Refer to Visio P&ID Process Designer [System Requirements](#).
- Visio P&ID Process Designer 2020 is a Software that requires Microsoft Visio® Standard or Professional (2019 or 2016), Visio Plan 2 or Visio Online Plan 2 ([sold separately](#)) to operate.
- Register, then download and install full-featured software for Visio P&ID Process Designer 2020 (Microsoft Visio® Standard or Professional (2019 or 2016), Visio Plan 2 or Visio Online Plan 2).
- Depending on the operating system installed on your system 32-bit or 64-bit, install the 32-bit or 64-bit version of the desired Microsoft Visio software.
- Ensure you have read/write access for installation.
- Ensure minimum 1GB space on C drive (files will be extracted on C drive).
- Once Microsoft Visio is installed, open and close it once before installing Visio P&ID Process Designer 2020.
- [Close all](#) active Microsoft® office applications (including Visio) before installing Visio P&ID Process Designer 2020.
- Depending on your installed Visio version, click trial version of Visio P&ID Process Designer 2020 download link to initiate your download and then run the installation.
- In the installation window, select “Visio P&ID Process Designer 2020 setup” and follow steps to complete the installation.
- Disconnect all external devices like Docking Stations while generating the license code and also while activating the license code. You can start using your external devices once you successfully activated the license code.
- Make sure to turn off the antivirus and firewalls (if any) while installing the Visio P&ID Process Designer 2020.
- We recommend before proceeding with the Visio P&ID Process Designer 2020 installation, first launch the installed Microsoft Visio® application for a seamless integration with our solution.
- Restart your computer before launching the trial.
- To ask questions or provide feedback, please send us mail on [support@visiopic.com](mailto:support@visiopic.com).